



EN 1088 (5.7)



Operating Instructions EN

Manuel d'opération FR

Instructivo ES

Technical Support:

Telephone: 800-241-4459 or 423-262-2522

Fax: 423-262-2200

Internet: <http://www2.sea.siemens.com/Support/Controls/>

All technical Regional Support should be directed to:

Atlanta, GA. Call 800-207-7186


Chicago, IL. Call 800-333-7732

Cypress, CA. Call 877-548-0920


Houston, TX. Call 800-879-6891



Philadelphia, PA. Call 800-388-8067

EN		DANGER	Hazardous voltage. Will cause death or serious injury. Turn off and lock out all power supplying this device before working on this device.
FR		DANGER	Tension dangereuse. Danger de mort ou risque de blessures graves. Mettre hors tension avant d'intervenir sur l'appareil.
ES		PELIGRO	Tensión peligrosa. Puede causar la muerte o lesiones graves. Desconectar la alimentación eléctrica antes de trabajar en el equipo.

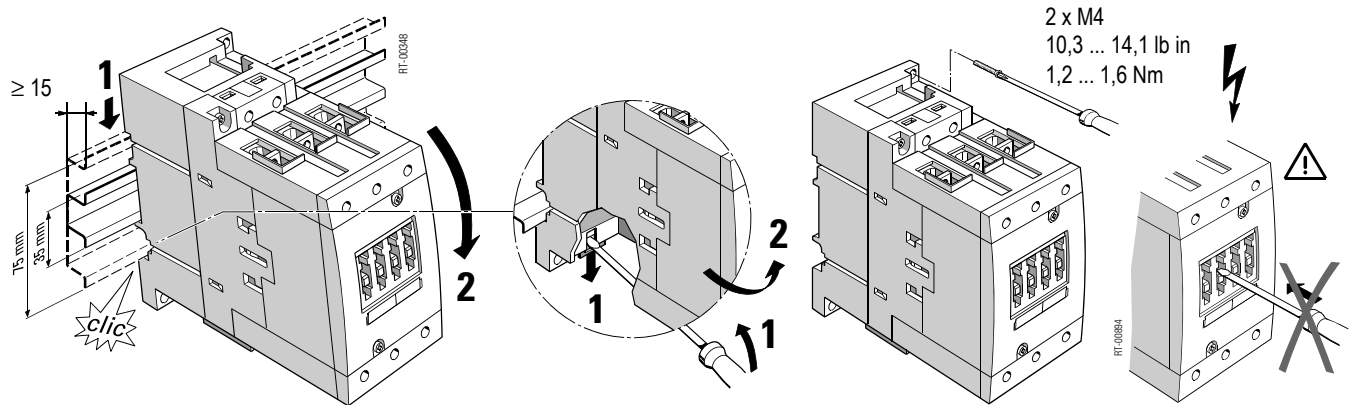


3RH1921-1....

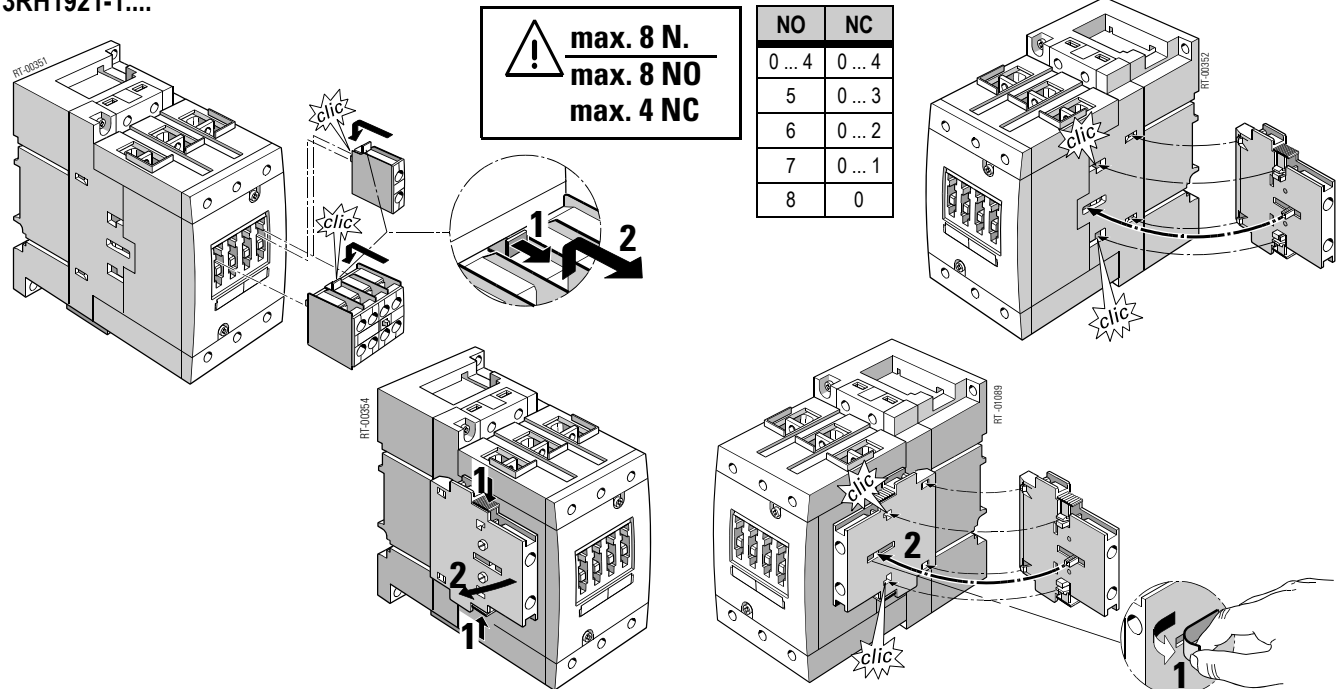


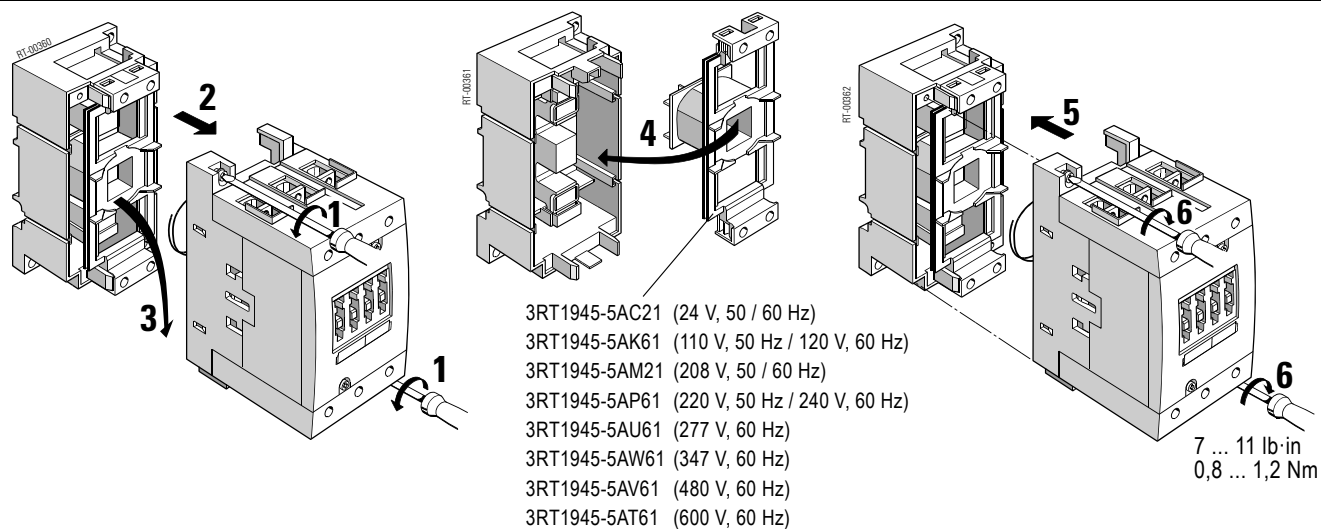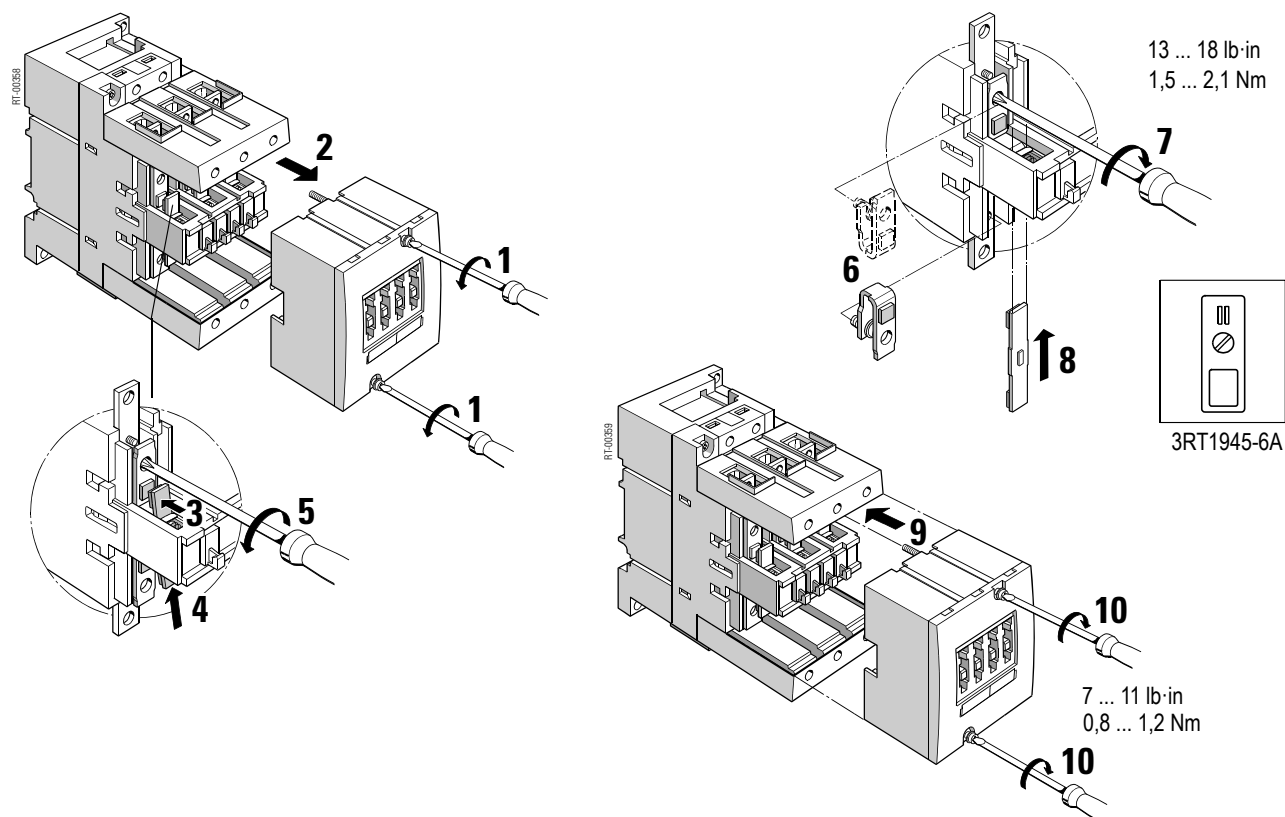

	A1/A2; NO/NC		L1, L2, L3 T1, T2, T3
AWG	2 x 18 to 14	AWG	2 x 10 to 1/0 1 x 10 to 2/0
 Ø 5 ... 6 mm / PZ2	7 to 10.3 lb·in 0,8 ... 1,2 Nm		36 to 53 lb·in 4 ... 6 Nm
	2 x 0,5 ... 1,5 mm ² 2 x 0,75 ... 2,5 mm ²		2 x 2,5 ... 16 mm ²
	2 x 0,5 ... 2,5 mm ²		2 x 2,5 ... 35 mm ² 1 x 2,5 ... 50 mm ²
	—		2 x 10 ... 50 mm ² 1 x 10 ... 70 mm ²

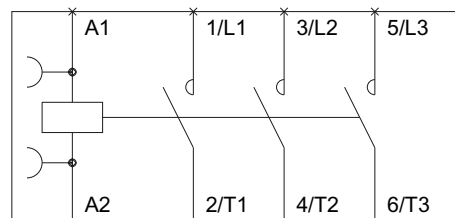

EN	Mounting position	FR	Position de montage	ES	Posición de montaje
----	-------------------	----	---------------------	----	---------------------

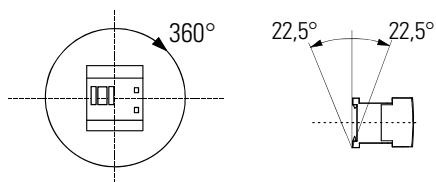

EN	Dimension drawings (all dimensions in mm)	FR	Shéma de dimensions (unité de mesures en mm)	ES	Dibujos dimensionales (medidas en mm)
----	--	----	---	----	--

